

-COCv1FZ3y4

(SPEECH)

[00:00:00.00] [MUSIC PLAYING]

(DESCRIPTION)

[00:00:00.20] Text, Bissell. SpinWave. No Power.

(SPEECH)

[00:00:05.21] If you're experiencing no power with your SpinWave, follow these tips.

(DESCRIPTION)

[00:00:09.23] Unplugs from wall.

(SPEECH)

[00:00:10.28] With the machine unplugged, make sure there is no damage anywhere on the power cord.

(DESCRIPTION)

[00:00:15.00] The woman runs her fingers down the length of the power cord.

(SPEECH)

[00:00:18.28] Check to see if the outlet is working. You can test this by plugging something small, like a cell phone charger, into the outlet. Often homes have several outlets on the same breaker, and the breaker can be tripped if multiple appliances are plugged into those outlets.

(DESCRIPTION)

[00:00:32.94] Breaker Box

(SPEECH)

[00:00:34.02] Try using an outlet in a different area, or resetting any tripped breakers. Remember, you can only turn the power on when the unit is reclined first.

(DESCRIPTION)

[00:00:42.85] Reclines the handle of the unit

(SPEECH)

[00:00:44.75] Plus, when put upright, your SpinWave will always turn off automatically. Lastly, the pads will stop spinning if there's too much resistance from pushing toward the floor or stepping on the top. Simply put the unit upright, then unplug it and plug it back in to reset.

(DESCRIPTION)

[00:01:01.90] Plugs the cord in.

(SPEECH)

[00:01:03.08] We hope these new tips get you back to cleaning.

[00:01:05.29] [MUSIC PLAYING]

(DESCRIPTION)

[00:01:06.06] Text, Bissell. Home to a deeper clean.