

## **B8oLOCMsYus**

(SPEECH)

[00:00:00.00] [UPBEAT MUSIC]

(DESCRIPTION)

[00:00:00.00] Logo, Bissell.

(SPEECH)

[00:00:01.67] When deep-cleaning your carpet, be sure to empty the dirty water tank when it's full. This will ensure your machine continues to function properly as you clean. You will notice the full line on the tank helping to indicate when it is time for you to empty.

[00:00:14.54] First, turn off your machine and easily remove the tank to carry it to a convenient sink. Remove the tank top. If you still have clean water and solution in the bladder, you can use your hand to cover the opening to make sure this does not spill out with the dirty water.

[00:00:28.37] Pour out the dirty water. If the clean water and solution is empty, now would be a good time to refill the bladder to continue cleaning. Replace the tank lid and replace your tank on your machine. Now you are ready to continue cleaning your room.

[00:00:41.54] [UPBEAT MUSIC]

(DESCRIPTION)

[00:00:41.99] Bissell, Home to a deeper clean.