

z7Hedc2Ena4

(SPEECH)

[00:00:00.00] [MUSIC PLAYING]

(DESCRIPTION)

[00:00:00.00] Bissell logo, CrossWave All-In-One Multi-Surface Cleaner, Loss of Suction

(SPEECH)

[00:00:05.36] Your CrossWave may have lost suction in the middle of cleaning. Don't worry, we're here to help. Unplug and check to see if your clean tank is seated properly.

(DESCRIPTION)

[00:00:14.76] A person checks the tank seating.

(SPEECH)

[00:00:17.23] Also, remove the dirty water tank and make sure there are no clogs in the hose below it.

(DESCRIPTION)

[00:00:22.86] Pulls out a clog.

(SPEECH)

[00:00:24.62] Remove the filter and clean both the screen and filter of any buildup or debris, and empty the tank before replacing it.

(DESCRIPTION)

[00:00:31.84] Rinses.

(SPEECH)

[00:00:32.98] Check for any buildup or clogs in the area leading up to the tank, and remove. Check the brush for any buildup of hair or string, and replace by putting the right side in first and lock the left side in by pushing downward. Lastly, secure the brush window by inserting the tabs on the front and pressing down into place until you hear a click. Now that your CrossWave is free of any obstruction, you may resume cleaning again.

[00:00:59.17] [MUSIC PLAYING]

(DESCRIPTION)

[00:00:59.25] Logo, Bissell. Text, Home to a deeper clean.